

## SERVE & POUR COFFEE MACHINE

### GENERAL SAFETY

For information and advice on the suitability and safety of this type of equipment please contact Jaspers Hire.

This equipment should only be used by a competent and responsible adult who has read and understood these instructions.

Keep all children, animals and bystanders away from the work area.

Ensure that the equipment is sitting level and the floor of the work area is free from trip hazards and nonslip.

Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use and report any damage to Jaspers Hire.

### REMOVE ALL PACKAGING BEFORE USE.

There is a risk of injury if you do not follow the instructions printed in this guide.

### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Jaspers Hire. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be fully unwound, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

**IMPORTANT: THIS EQUIPMENT REQUIRES A CONTINUOUS SUPPLY OF 13AMPS TO OPERATE CORRECTLY.**

**IF THIS EQUIPMENT IS NOT REACHING TEMPERATURE YOU MAY NOT HAVE ENOUGH AMPS.**

### SERVE & POUR COFFEE MACHINE OPERATING GUIDE

1. Place filter paper into plastic infuser, pour in the ground coffee and position the infuser in slide.
2. Place clean empty decanter under the infuser.
3. Lift lid and pour a full decanter of cold drinking water into the water tank.
4. The decanter below infuser will be filled with fresh coffee in approximately 4-6 minutes.
5. The decanter of coffee may be stored on the bottom warmer which will maintain it at the correct serving temperature.

Alternatively, the top warmer may be used: this has a separate switch and is on when the amber light is lit.

6. Remove infuser, dispose of grounds and filter paper, wash infuser and rinse in clean water.

7. Always wash out decanter after use.

8. Repeat brewing as required.

**FRESH COFFEE CAN BE PURCHASED FROM JASPERS HIRE ON A SALE OR RETURN BASIS**

