

## WATER BOILER

### GENERAL SAFETY

For information and advice on the suitability and safety of this type of equipment please contact Jaspers Hire.

This equipment should only be used by a competent and responsible adult who has read and understood these instructions.

Keep all children, animals and bystanders away from the work area.

Ensure that the equipment is sitting level and the floor of the work area is free from trip hazards and nonslip.

Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use and report any damage to Jaspers Hire.

### REMOVE ALL PACKAGING BEFORE USE.

There is a risk of injury if you do not follow the instructions printed in this guide.

### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Jaspers Hire. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be fully unwound, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

**IMPORTANT: THIS EQUIPMENT REQUIRES A CONTINUOUS SUPPLY OF 13AMPS TO OPERATE CORRECTLY.**

**IF THIS EQUIPMENT IS NOT REACHING TEMPERATURE YOU MAY NOT HAVE ENOUGH AMPS.**

### WATER BOILER OPERATING GUIDE

#### Safety

Read the instructions before attempting to use the appliance.

Contact Jaspers Hire before use if there is any damage on the equipment.

Never touch the heated surfaces. Use handles and knobs provided.

Exercise extreme caution when moving any equipment containing hot water.

It is recommended to empty the contents of the equipment before attempting to lift or move it.

Never immerse the water boiler or plug in water or any other liquid.

Always unplug the water boiler from power when not in use or before cleaning.

Never operate water boiler with a damaged power cord or plug.

Do not allow the water boiler to boil dry.

Do not use any accessories or attachments.

Never place the water boiler on or near to a hot surface or in a heated oven.

Always turn the water boiler controls off before removing the plug from a power socket.

Never use the water boiler for any other purpose other than it's intended use.

Never overfill the water boiler.

Beware of scalding steam when lifting the water boiler lid.

#### OPERATING

Place the water boiler on an even surface (with sufficient strength to carry the weight when full).

Make sure there is enough room above the water boiler to allow filling.

Position the water boiler tap where it can be reached easily whilst in use.

Fill the water boiler to the desired level and replace the lid (do not overfill).

Take the water to the water boiler – do not lift or carry a water boiler filled with water.

Plug the water boiler into a power socket which can supply the correct amount of power and switch the power on.

For maximum heating, turn the control knob clockwise until it stops.

The red light will signal that the power is on and the water boiler is heating.

Set the control knob to the required temperature. The red light will turn off when the water has reached the correct temperature. The water boiler will cycle on and off to keep the water at the selected temperature.



To re-boil the water, turn the control knob clockwise back to the maximum position.

When not in use turn the control knob and power socket switch off.

In the event of a boil dry, a safety cut-out switch will activate.

**To re-set the safety cut out switch, allow the water boiler to cool down, disconnect from the power source and reset by pressing the button on the water boiler base.**

#### CLEANING INSTRUCTIONS

To keep the water boiler clean, empty and fill with fresh water daily.

Clean exterior with stainless steel cleaner and with a dry cloth.

Do not use a water jet to clean the water boiler.

Contact Jaspers Hire if you have any questions regarding the use or handling of this water boiler.